 


## Congratulations on your purchase of the Sevenoak Camera Track Slider.

Sevenoak's camera track slider is a sturdy, portable, and lightweight mini dolly that adds production value to any videoshoot. It provides the ability to get quick, smooth short-rundolly shots and a variety of tracking shots without having to carry a full dolly system and track.

The heavy-duty aluminum construction with precision-engineered rails provide smooth and quiet panning for the entire length of the rails and ensure effortless motion for a rig of up to 10KG. Individually adjustable feet and an integrated bull's-eye bubble level make leveling the rail easy and ensure that it won't wobble if placed on a slightly uneven surface. Threaded mounts (3/8" and 1/4"-20) on the mounting plate assure compatibility with most cameras or tripod heads. The camera track slider is easily assembled without tools. One or two sets of threaded 1/4"-20 and 3/8" holes on the rail provide the option of mounting the slider on top of a single tripod (SK-LS85B and SK-LS120B).

## Components

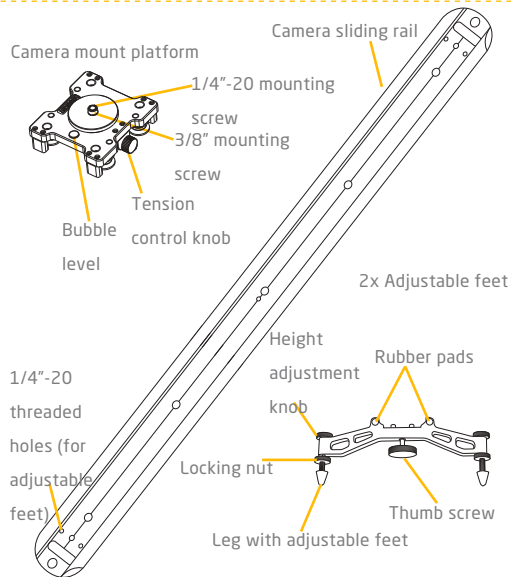

## Warnings

- Please read and follow these instructions, and keep this manual in a safe place.
- Handle the unit with care.
- Camera sliding rail may have sharp edges.
- Clean the unit with a soft, dry cloth.
- Use only parts provided by the manufacturer.
- Make sure everything is secure before proceeding.
- Make sure the item is intact and that there are no missing parts.
- Do not exceed the maximum load capacity.
- All photos are for illustrative purposes only.

## Limited One - year Warranty

Sevenoak provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement (the "Warranty Period"), whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective Product along with proof of purchase and the RMA number.

This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. Except as provided herein, Sevenoak makes neither any express warranties nor any implied warranties, including but not limited to any implied warranty of merchantability or fitness for a particular purpose. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

For more information or to arrange service, visit [www.sevenoak.biz](http://www.sevenoak.biz) or call Customer Service at 86-755-28435910. Sevenoak (Hong Kong) Technology Co., Ltd

# SEVENOAK®



 
SK-LS85B (Black Color)  
SK-LS120B (Black Color)

Camera  
Track Slider

## Instructions

### Attaching a camera or tripod head to the camera mount


1. Remove the camera mount from the sliding rail by sliding the camera mount off of the rail. This may require removing one of the adjustable feet.
2. Unscrew the mounting screw that will not be used from the camera mount and set it aside.
3. Use the 3/8" or 1/4"-20 mounting screw to attach a camera or tripod head to the mounting plate.

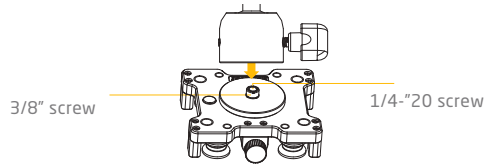


Note: the mounting screw may need to be tightened with an Allen key (not included).

### Attaching the legs and adjusting the feet

 1. Align the two posts on the leg with the guide holes on the rail. Make sure the rubber pads on the frame are facing in toward the center of the rail.

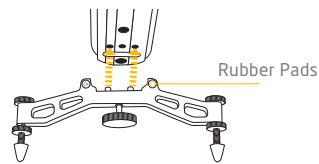


 2. Tighten the thumb screw until tight and the leg is secure.



3. Once one leg has been attached, slide the camera mounting plate with the tripod head/camera onto the rail.

 4. Attach the second leg.
5. Refer to the bubble level on the camera mounting plate to determine if it is level. Also check to see if the assembled track slider wobbles.
6. Loosen the locking nuts on all of the feet.
7. Adjusting the height of each foot until the bubble in the bubble level is within the bull's-eye, or until all feet rest uniformly on the surface without wobbling.

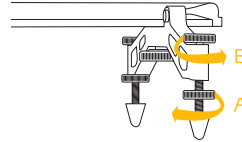


8. Tighten the locking nuts by tightening them against the frame of the leg.

### Tripod attachment

 The rail has 3/8" and 1/4"-20 threaded holes for attaching to one or two tripods.

The SK-LS85B and the SK-LS120B are designed to attach to two tripods, and the threaded holes are located at either end of the rail.

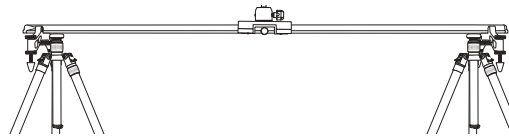


### To attach the rail to one or two tripods, do the following:

1. Remove one of the adjustable feet and the camera mounting plate from the rail.
2. (SK-LS85B and SK-LS120B) After attaching one end of the rail to the first tripod, slide the camera mounting plate onto the rail from the other end, and then attach the second tripod to the other side of the rail.
3. Reattach the feet so that feet are in place at both ends of the rail and prevent the camera from sliding off.

### Adjusting the tension of the camera mounting plate

#### To adjust the tension, do the following:

 1. To add tension, turn the tension control knob clockwise.
2. For less tension, turn the tension control knob counter clockwise.

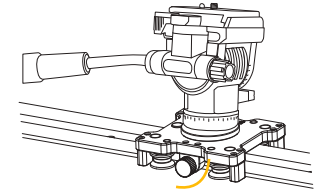

## Specifications

### SK-LS85B

Load capacity: 15.4 lbs. (7kg)  
Dimensions: 3.5" x 2.75" x 33.5" (9x7x84.3cm)  
Weight: 2.5 lbs. (1.13kg)  
Height adjustment: 0.5" (1cm)

### SK-LS120B

Load capacity: 11 lbs. (5kg)  
Dimensions: 3.5" x 2.75" x 47.2" (9x7x120cm)  
Weight: 3.18 lbs. (1.44kg)  
Height adjustment: 0.5" (1cm)

Visit [www.sevenoak.biz](http://www.sevenoak.biz) for more information on our complete line of video mounting products.

jiayz™

# 深圳市长丰影像器材有限公司

产品/零件名称	SK-LS85B/LS120B黑色版本说明书	比例	1 : 1	版本	V00
工程图号	SK-LS85B/LS120B黑色版本说明书V00	物料描述	105克双铜纸 正反面 3折页		
物料编号	1F14015SK0111	尺寸/用量	尺寸：279x216mm	1PCS	
制图人/日期	吴蒙蒙/2016/6/7	审核/日期			