




SK-RX0C  
Cage for Sony RX0

© 2018 Sevenoak Inc. Visit us on the web at [www.sevenoak.biz](http://www.sevenoak.biz)

### Components

1. Camera cage\*1
2. Hand grip\*1
3. Cold shoe\*1
4. Hand strap\*1
5. 1/4" camera locking screw\*1
6. Key for camera locking screw

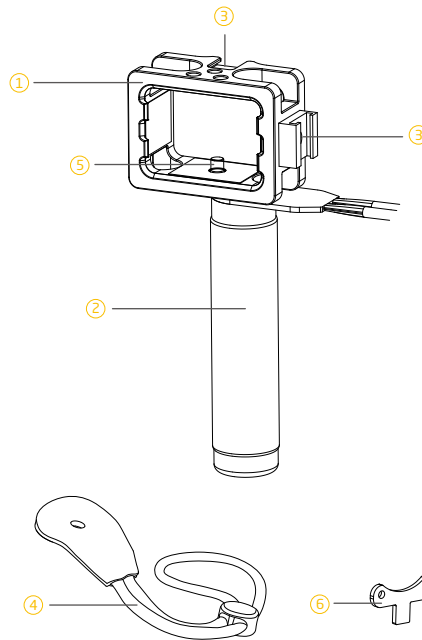


### Start to use

#### Step 1:


Please put your Sony-RX0 camera and 1/4" camera locking screw in right position according to the pictures shown below.

Use the key for camera locking screw to lock the camera into the SK-RX0C camera cage.

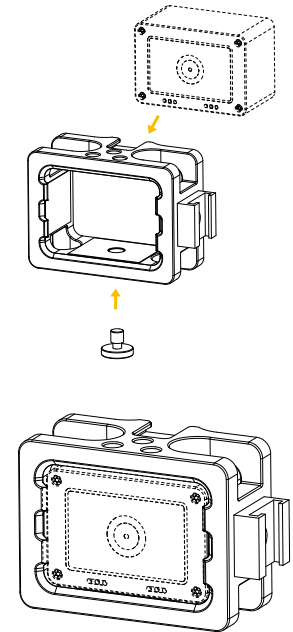


#### Step 3:

Attach the hand strap on the top of the hand grip and make sure the screw of hand grip is right under the camera cage mounting hole.

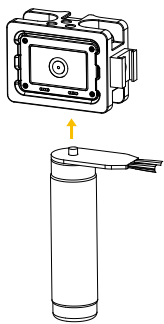


#### Step 4:

Turn the hand grip clockwise under the camera cage, till the hand grip is securely fastened.

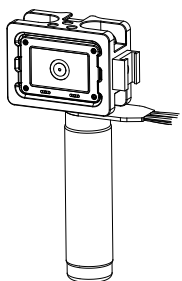


#### Step 5:

Mount the microphone or LED light (sold separately) onto the cold shoe of the cage as the picture shows.

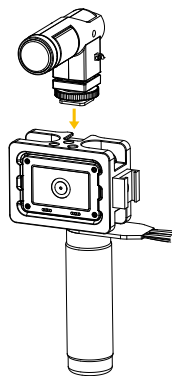

#### Step 6:

Lock the microphone or LED light tightly (sold separately) on the cold shoe. Now you can start to use.

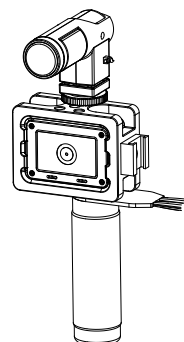

### Warnings

- Please read and follow these instructions, and keep this manual in a safe place.
- Handle the unit with care.
- Clean the unit with a soft, dry cloth.
- Use only parts provided by the manufacturer.
- Make sure everything is secure before proceeding.
- Make sure the item is intact and that there are no missing parts.
- Do not exceed the maximum load capacity.
- All photos are for illustrative purposes only.

### Limited One-year Warranty

Sevenoak provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement (the "Warranty Period"), whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number.

This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. Except as provided herein, sevenoak makes neither any express warranties nor any implied warranties, including but not limited to any implied warranty of merchantability or fitness for a particular purpose. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

© 2018 Sevenoak Inc. Visit us on the web at [www.sevenoak.biz](http://www.sevenoak.biz)